



## Instruction Manual

AR01 : WJ10 AR02 : WJ11  
AR03 : WJ12 AR04 : WJ13  
[JC013]

Thank you very much for purchasing an ASICS watch. The Certificate of Guarantee is included in this Instruction Manual. Please ensure that it is filled in properly with all the necessary information including date of purchase and name of retail store. For proper use and care of your ASICS watch, please read the instructions in this manual carefully before use. Keep this manual handy for ready reference.

\* Length adjustment service for metallic bands is available at the retailer from whom the watch was purchased. If you cannot have your watch repaired by the retailer from whom the watch was purchased because you received the watch as a gift, or you moved to a distant place, please contact SEIKO CUSTOMER SERVICE CENTER. The service may also be available on a chargeable basis at other retailers, however, some retailers may not undertake the service.  
\* The battery in your watch at the time of purchase is a monitor battery inserted at the factory to check the function and performance of the watch. Battery replacement is at cost even within the guarantee period.  
\* If your watch has a protective film for preventing scratches, make sure to peel it off before using the watch. If the watch is used with the film on it, dirt, sweat, dust, or moisture may be attached to the film and may cause rust.

## SPECIFICATIONS

Chronograph function	Measures up to 100 hours.
Lap/split time measurement function	Up to 500 laps can be stored (when only one RUN is measured).
Timer function	2-channel Repeat Timer
Alarm function	3-channel Daily Alarm
Water-proof feature	AR01/AR02 Water resistant 5 bar AR03/AR04 Water resistant 10 bar
Operational temperature range	-5°C ~ +50°C
Loss/gain (monthly rate)	Less than 30 seconds at normal temperature range (5°C ~ 35°C) (when the watch is worn on the wrist)

## Materials

Case	Plastic
Bezel	Aluminum (Only on AR03/AR04 models)
Strap	Polyurethane
Glass	AR01/AR02 Mineral glass AR03/AR04 Acrylic glass

## Battery

Series	Model	Battery Code	
AR01	WJ10	CR2016	SB-T11
AR02	WJ11	CR2025	SB-T14
AR03	WJ12	CR2016	SB-T11
AR04	WJ13	CR2025	SB-T14

## Battery Life

Approximately 3 years (Battery life may vary depending on the frequency of use of any given function.)




Never operate any of the buttons in water. The watch may be damaged due to water immersion.

\*The specifications are subject to change without prior notice, for product improvement.


For best results, please read the instructions in this booklet carefully before using your Digital Quartz Watch. Please keep this manual handy for ready reference.

## Description of Parts

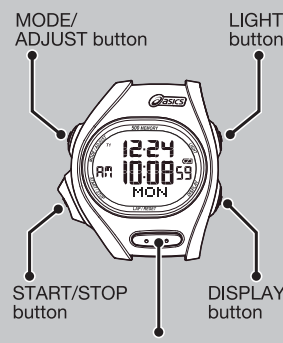

\* For the models with an inverted LCD display, the digits and marks on the display are shown in white against a black background.


## Mode Selection

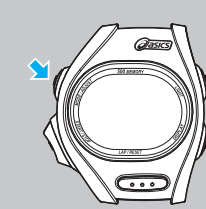


Mode changes with each press of MODE/ADJUST. Press the button repeatedly to show the desired mode.

## Time

### Changeover of displays

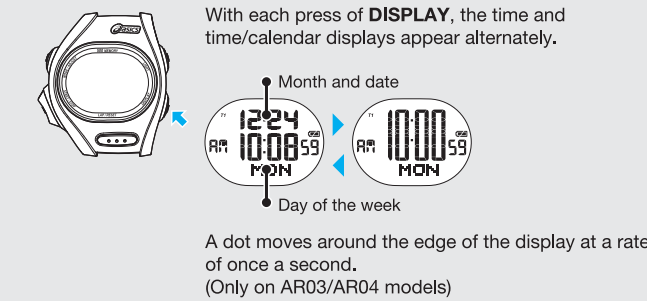

### Time setting/contrast adjustment/use of "ECO" function

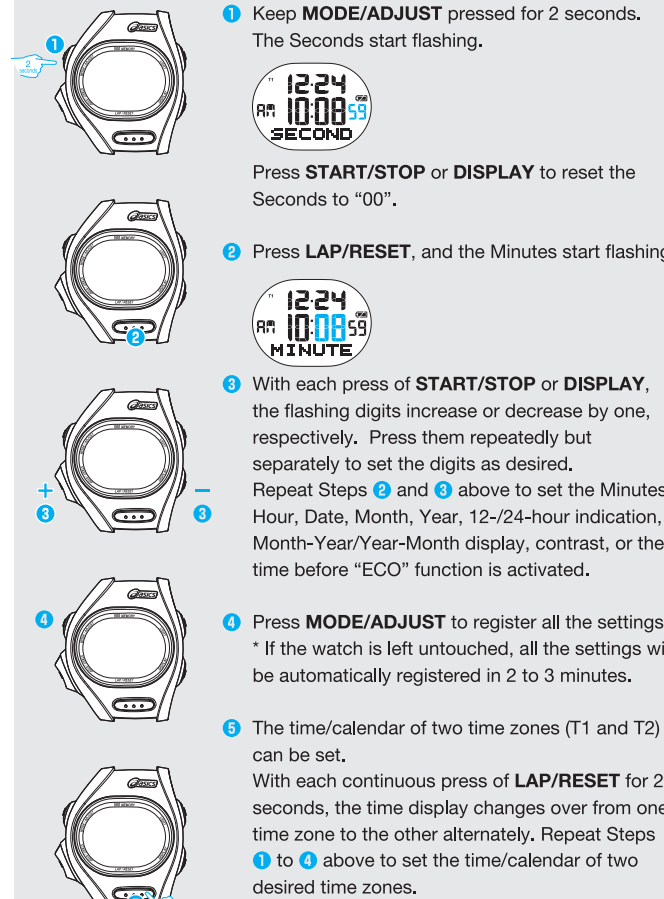

### Contrast adjustment

The contrast of the display can be adjusted. Setting range: 3 (highest) to -3 (lowest)  
Activation of "ECO" function  
The "ECO" function automatically turns off the display when the preset time (0 ["ECO" function is deactivated], 1, 3, 6, or 12 hours) has elapsed, to save the battery power.

### Turning ON/OFF of button operation confirmation sound

With each press of START/STOP, a sound appears and disappears alternately. The button operation confirmation sound rings when the mark is shown.

### Alarm sound test

The alarm sound can be tested by pressing both START/STOP and DISPLAY simultaneously.

### Confirmation of target lap time and remaining capacity for lap time measurement

While LAP/RESET is kept pressed, the target lap time you have set and the remaining storable number of LAP times are shown on the display.

\* After the 500th LAP time has been measured, the remaining storable number of LAP times will not be shown.



## TIME

Time and calendar of two time zones can be set. Button operation confirmation sound can be turned on and off as desired.



## CHRONOGRAPH

Both lap time and split time are measured. Target lap time can be set, and beeps sound as it is reached.



## DATA

Lap time, split time, best lap time, and average lap time stored in CHRONOGRAPH mode can be recalled. Alphabet, numerals and other characters can be entered to attach a memo to the RUN data.



## TIMER


Two timers repeat counting down the respective set times alternately.



## ALARM


Three alarm channels are available.

## Backlight

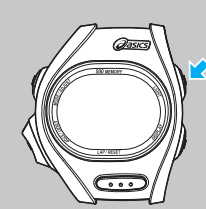


Pressing LIGHT turns on the backlight. With each continuous press of LIGHT for 2 seconds, the automatic backlight function is activated and deactivated alternately. When it is activated, the backlight turns on each time a button is pressed.

## Mark Descriptions


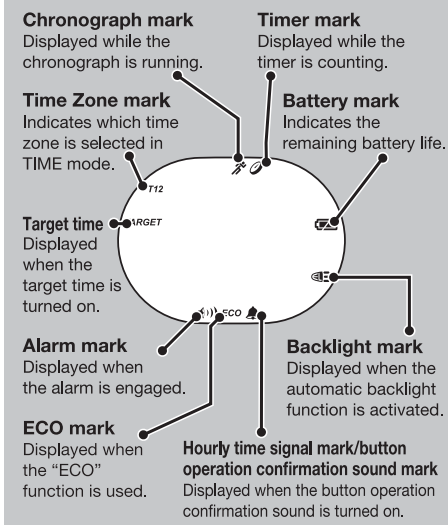


## Chronograph

### Changeover of displays

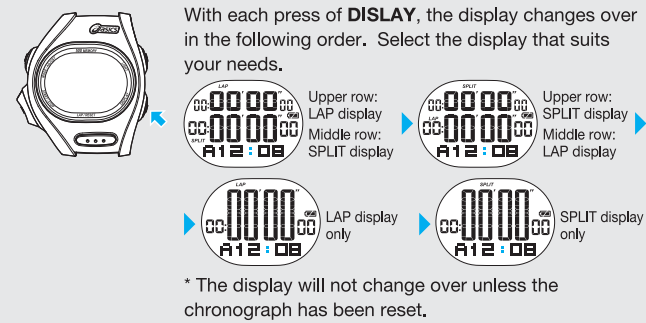


### Start, stop and reset of measurement/storage of measured data

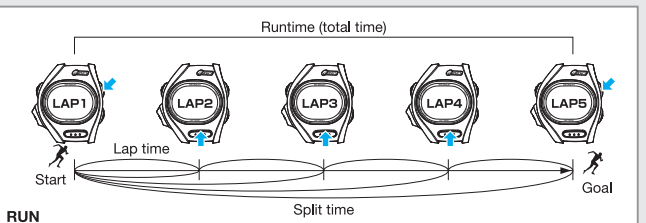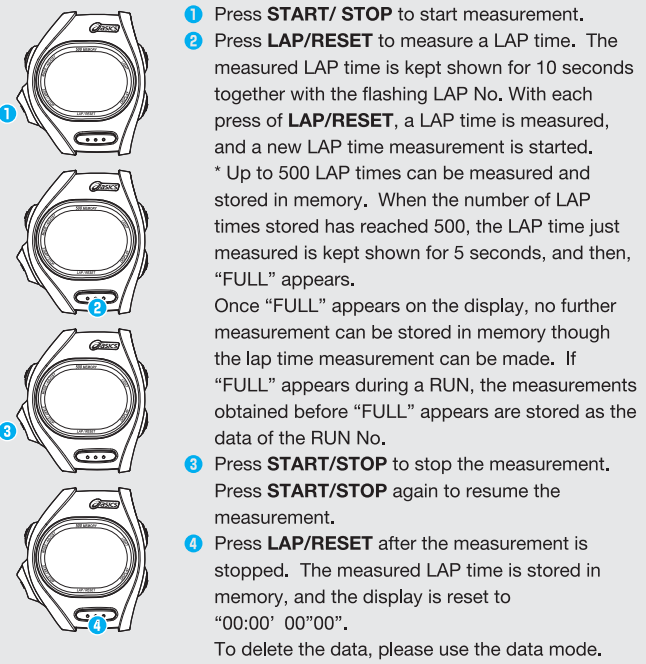

RUN RUN time refers to the time required to go the entire run distance from the start to the finish, and corresponds to the sum of each LAP time.  
LAP LAP time refers to the time required to go any given section of the entire run distance.  
SPLIT SPLIT time refers to the time required to go from the start to any given section of the run distance.


### Target lap time setting

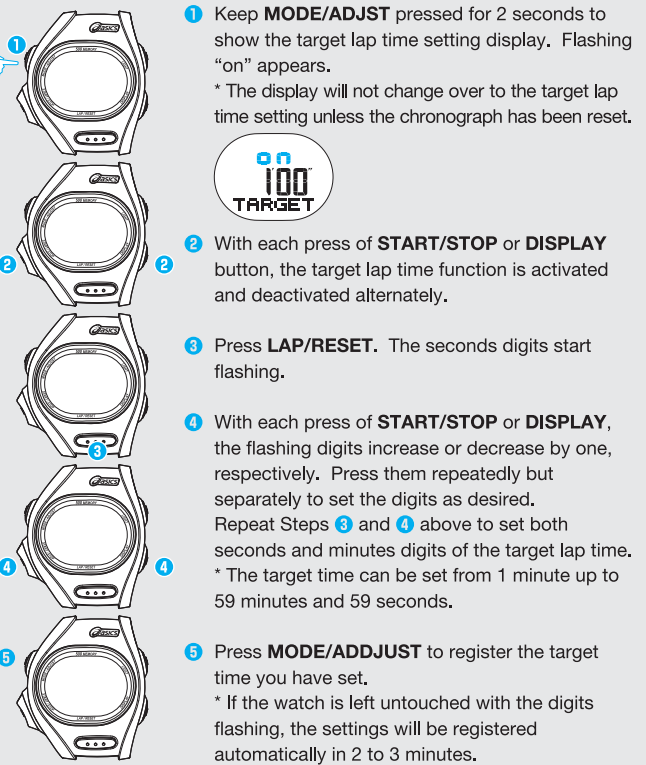


Target lap time function  
The LAP time measured can be checked against the preset target lap time. When the target lap time function is activated, the tops of the target lap time you have set is signalled by beeps during the measurement starting from 3 seconds before the target lap time is reached. To stop the beeps manually, press any of the buttons.  
\* Be sure to stop the beeps before measuring a LAP time or stopping the measurement. The difference between the LAP time measured and the target lap time is shown in the upper row of the display for approximately 10 seconds.  
The ratio of the elapsed to the entire target lap time is indicated by the dots around the edge of the display. (Only on AR03/AR04 models)

## Data Mode


### How to recall data

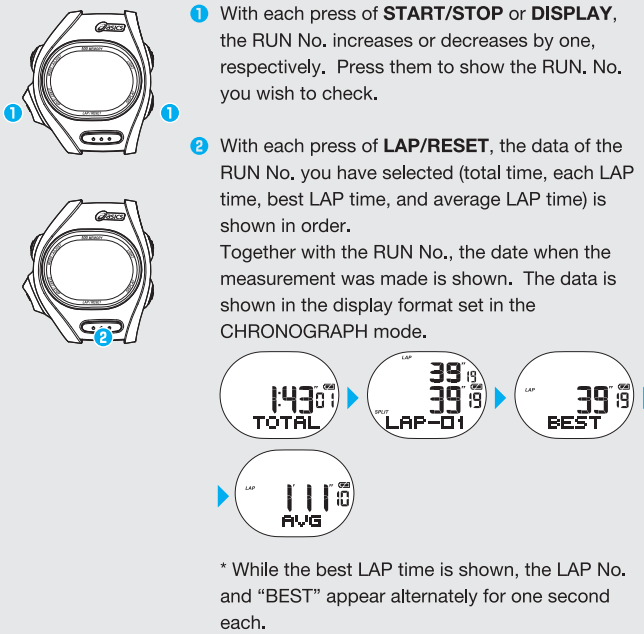

### Deletion of data

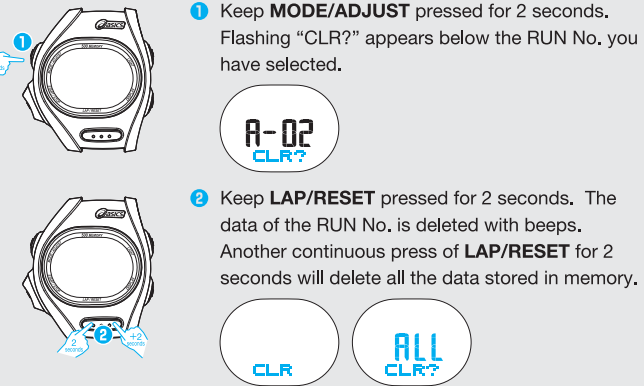


### Data memo input

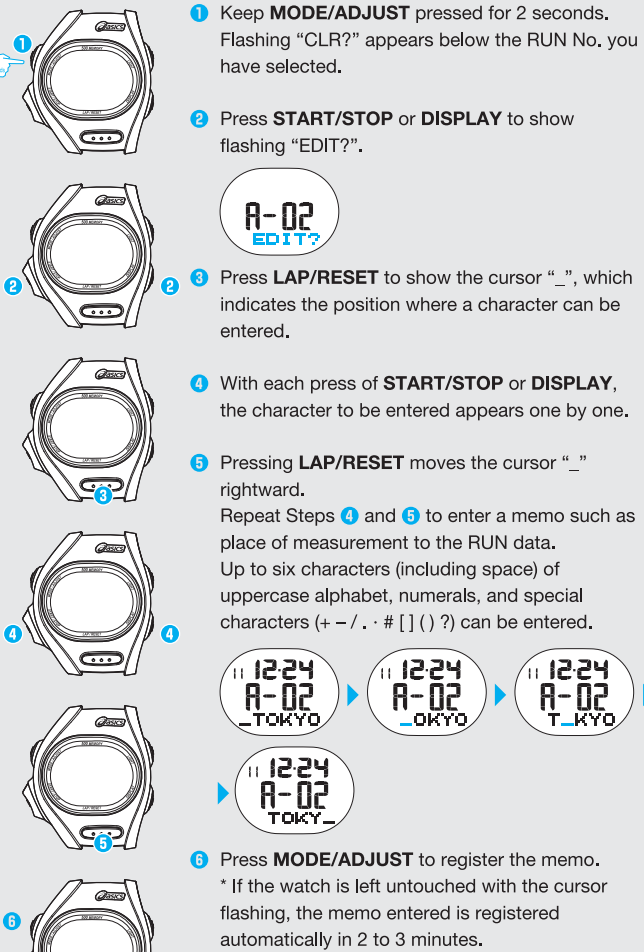


Memo input  
A memo can be entered in each RUN No. in memory using alphabet, numerals and special characters.

## Timer

### Timer setting

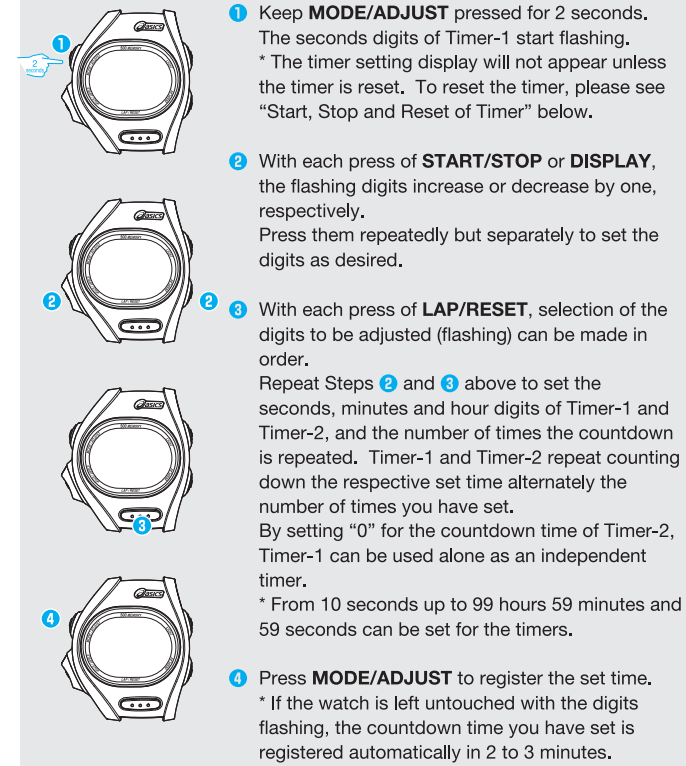


### Timer start, stop and reset

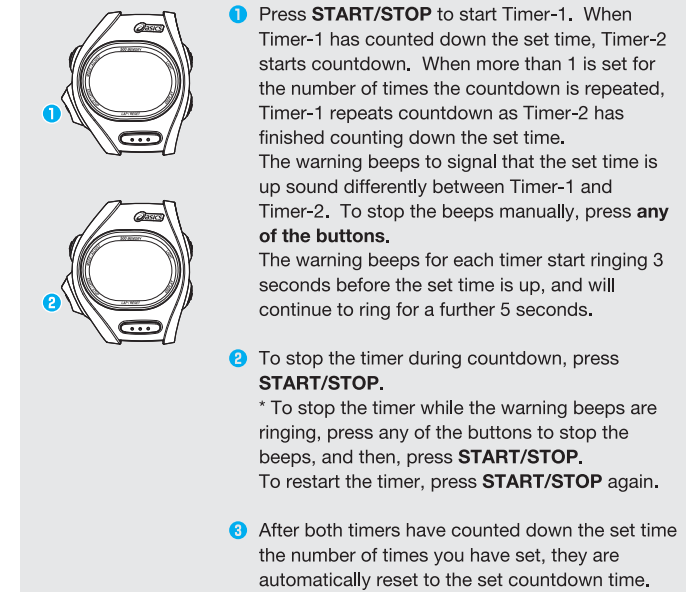


## Alarm Mode

### Alarm setting

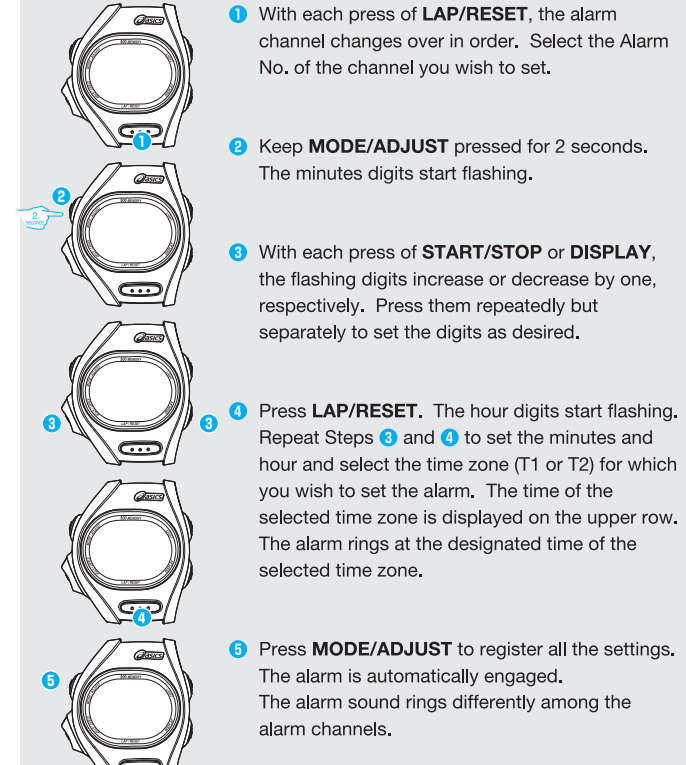

### Engagement/disengagement of alarm

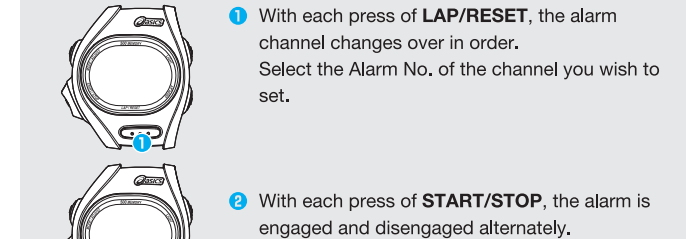

### To stop alarm sound

The alarm will ring for 20 seconds at the designated time. To manually stop the alarm, press any of the buttons.

## TO PRESERVE THE QUALITY OF YOUR WATCH

### Handling Cautions

- Immediately stop wearing the watch in following cases.
  - If the watch body or strap is severely damaged by corrosion etc.
  - If the pins protrude from the band.
- Keep the watch and accessories out of the reach of babies and children. Care should be taken to prevent a baby or a child accidentally swallowing the battery or accessories.
- If a baby or child swallows the battery or accessories, immediately consult a doctor, as it will be harmful to the health of the baby or child.
- Do not remove the battery from the watch. Replacement of the battery requires professional knowledge and skill. Please ask a watch retailer for replacement of the battery. Do not attempt to charge the battery, as this may cause battery explosion, heat generation, battery leakage, or damage to the battery.
- Do not use the watch in scuba diving or saturation diving. The various tightened inspections under simulated harsh environment, which are usually required for watches designed for scuba diving or saturation diving, have not been conducted on the water-resistant watch with the BAR (barometric pressure) display. For diving, use special watches for diving.

### CAUTION

- Avoid wearing or storing the watch in the following places.
  - Places where volatile agents (cosmetics such as polish remover, bug repellent, thinners etc.) are vaporizing
  - Places where the temperature drops below 5°C or rises above 35°C for a long time
  - Places of high humidity
  - Places affected by strong magnetism or static electricity
  - Dusty places
  - Places affected by strong vibrations
- For watches with batteries, do not leave a dead battery compartment for a long time as it may cause battery leakage.
- If you observe any allergic symptoms or skin irritation, stop wearing the watch immediately and consult a specialist such as a dermatologist or an allergist.
- Do not pour running water directly from faucet. The water pressure of tap water from a faucet is high enough to degrade the water resistant performance of a water resistant watch for everyday life.
- Do not press buttons when the watch is wet. Water may get inside of the watch.

\* If the inner surface of the glass is clouded with condensation or water droplets appear inside of the watch for a long time, the water resistant performance of the watch is deteriorated. Immediately consult the retailer from whom the watch was purchased or SEIKO CUSTOMER SERVICE CENTER.

- Be aware of a risk that a water resistant watch may lessen its water resistant performance because of deterioration of the adhesive on the glass or gasket, or the development of rust on stainless steel.
- Do not wear the watch while taking a bath or saunas, Steam, soap or some components of a hot spring may accelerate the deterioration of water resistant performance of the watch.
- Other cautions
  - Do not disassemble or tamper with the watch.
  - Keep the watch out of the reach of babies and children. Extra care should be taken to avoid risks of any injury or allergic rash or itching that may be caused when they touch the watch.
  - When disposing of used batteries, follow the instructions of your local authorities.
  - If your watch is of the fob or pendant type, the strap or chain attached to the watch may damage your clothes, or injure the hand, neck, or other parts of your body.

### Daily Care

- The watch requires good daily care.
  - Wipe away moisture, sweat or dirt with a soft cloth.
  - After soaking the watch in seawater, be sure to wash the watch in clean pure water and wipe it dry carefully.
- If your watch is rated as "non-water resistant" or "water resistant for daily use," do not wash the watch.

### Water Resistance

Refer the table below for the description of each degree of water resistant performance of your watch before using.

Indication on Case Back	Water Resistant Performance	Condition of use
No Indication	Non water resistance	Avoid drops of water or sweat.
WATER RESISTANT	Water resistance for everyday life	The watch withstands accidental contact with water in everyday life. Not suitable for swimming.
WATER RESISTANT 5 BAR	Water resistance for everyday life at 5 barometric pressures	The watch is suitable for sports such as swimming.
WATER RESISTANT 10 (20) BAR	Water resistance for everyday life at 10 (20) barometric pressures	The watch is suitable for diving not using an air cylinder.

### Band

The band touches the skin directly and becomes dirty with sweat or dust. Therefore, lack of care may accelerate deterioration of the band or cause skin irritation or stain on the sleeve edge. The watch requires a lot of attention for long usage.



## NECESSARY PROCEDURE AFTER BATTERY CHANGE (RESETTING THE IC)

- After the battery is replaced with a new one, or when an abnormal display such as broken digits appears, follow the procedure below. The built-in IC will be reset and the watch will resume normal operation.

[How to reset the built-in IC]

Keep buttons START/STOP, MODE/ADJUST, LIGHT and DISPLAY pressed at the same time for 2 to 3 seconds. The display will become blank, and the TIME mode display will appear. Before using the watch, set the watch in the following order.  
① Time/Calendar setting  
② Alarm setting

