



Instruction Manual AR05 : YK54

Warranty

Product	
Warranty period	Date of purchase:
Retailer	

SPECIFICATIONS

Chronograph function	Measures up to 23 hours, 59 minutes and 59 seconds
Lap/split time measurement function	Up to 100 laps can be stored (up to 50 laps for each of 2 RUNs).
Timer function	1-Channel Repeat Timer
Alarm function	3-Channel Daily Alarm
Water-proof feature	Water resistant 5 bar
Operational temperature range	0°C ~ +40°C

Materials

Case	Plastic
Bezel	Aluminum
Strap	Polyurethane
Glass	Acrylic glass

Loss/gain (monthly rate)

Less than 30 seconds at normal temperature range (5°C to 35°C) (when the watch is worn on the wrist)

Battery Life

Approximately 2 years (Battery life may vary depending on the frequency of use of any given function.)

Battery

	Model	Battery
AR05	YK54	CR1620



Never operate any of the buttons in water. The watch may be damaged due to water immersion.

* The specifications are subject to change without prior notice, for product improvement.

For the locations of the authorized ASICS service facilities, please visit our website at <http://www.asics-watch.com>.

For the US Consumers: Additional Notation to Obtain Warranty Service

Warranty Disclaimers

We make no express warranties other than as expressly set forth in this warranty.

WE HEREBY DISCLAIM ANY AND ALL LIABILITY FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty Limitations

All implied warranties, including, without limitation, implied warranties of merchantability and fitness for a particular purpose, which may exist, are limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

We make no warranties except as expressly set forth in this above.

TO PRESERVE THE QUALITY OF YOUR WATCH

WARNING Risks indicated under the assumption that major harm is inflicted resulting through unauthorized use.

CAUTION Risks and material braekage indicated under the assumption that minor harm is inflicted resulting through unauthorized use.

PRECAUTIONS ON WEARING YOUR WATCH

WARNING

In case you tumble, fall or bump into others with the watch worn on your wrist, you may be injured by the reason of the fact that you wear the watch.

When you make contact with children, especially with infants, they may get injured or develop a rash caused by allergy.

Your watch may damage property or malfunction depending on your actions when wearing it. Special care should be taken.

CAUTION

When clasping and unclasping the band, you may damage your nail, depending on the type of clasp used with the band.

CARE OF YOUR WATCH

CAUTION

The case and bracelet touch the skin directly just as underwear. If they are left dirty, the edge of a sleeve may be stained with rust or those who have a delicate skin may have a rash.

After removing the watch from your wrist, wipe perspiration or moisture with a soft cloth. This will prevent the watch from being soiled, this allowing for prolongation of the life of the gasket.

Your watch is extremely sensitive to chemicals, including benzine, thinner, alcohol, detergent and other organic solvents. Keep your watch away from chemicals and avoid their chemical reaction to your watch. If not, it may be deteriorated.

Leather bands

When removing moisture from a leather band, do not rub the band with the cloth as this may discolor it or reduce its gloss. Be sure to blot up the moisture using a soft dry cloth.

Metal bands

Clean a watch band with a soft toothbrush dipped in water or soapy water, and be sure to blot up the moisture using a soft dry cloth. If your watch is not water-resistant, be careful not to get the case wet when cleaning.

Polyurethane band

If your watch has a soft plastic band such as urethane band, do not leave the watch under a fluorescent lamp or direct sunlight for a long time, or do not leave the band soiled. Otherwise, the band may be discolored, hardened or broken. Also, do not keep the watch in a place where it is exposed to high humidity, or do not leave the band wet with perspiration or water. Otherwise, the band may be discolored in a very short time.

When the band is soiled, rinse it in soapy water. Do no use solvents for cleaning as some solvents may deteriorate the band.

If your watch has a semitransparent urethane band, which is easily discolored, special care should be taken to keep it clean. Depending on the condition of use, the semitransparent band may be discolored after several months of use.

RASH AND ALLERGY

CAUTION

Adjust the bracelet or band so that there will be a little clearance between the bracelet or band and your wrist to avoid accumulation of perspiration.

If you are constitutionally predisposed to rash, the band may cause you to develop a rash or disorder depending on your physical condition.

The possible causes of the rash are as follows:
1. Allergy to metals or leathers
2. Rust, dust or perspiration on the watch or band
3. If you develop any skin reactions, take off the watch and consult a doctor immediately

 
WATER RESISTANCE

Check the dial or case back of your watch for the water resistant quality, and then see the table below.


Indication for water resistance (on the back of your watch case)	Condition of use	Designed and used as intended				Swimming without scuba, snorkel, or heliograph	Swimming with scuba or heliograph
		Water-resistance	Water-resistance	Water-resistance	Water-resistance		
"WATER RESIST" is inscribed.	Water-resistance	○	○	○	○	○	○
"WATER RESIST 5 Bar/10 Bar" is inscribed.	Reinforced water-resistance	○	○	○	○	○	○

For best results, please read the instructions in this manual carefully before using your Digital Quartz Watch. Please keep this manual handy for ready reference.

NAMES OF BUTTONS

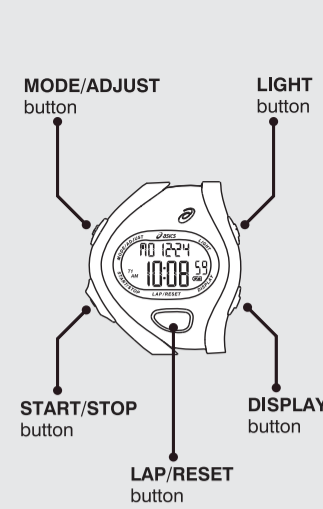


MODE SELECTION


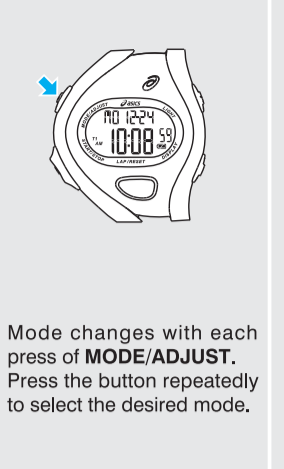 


TIME

 Time/Calendar Display

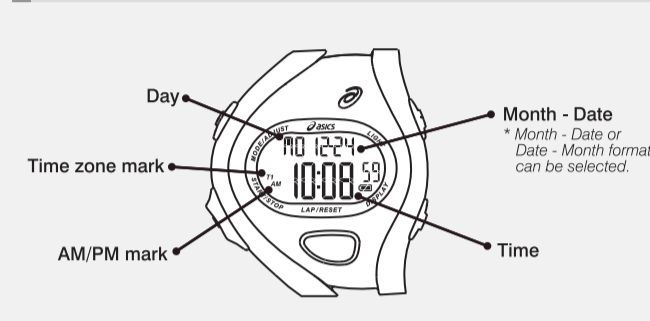


Time/Calendar and Contrast Setting

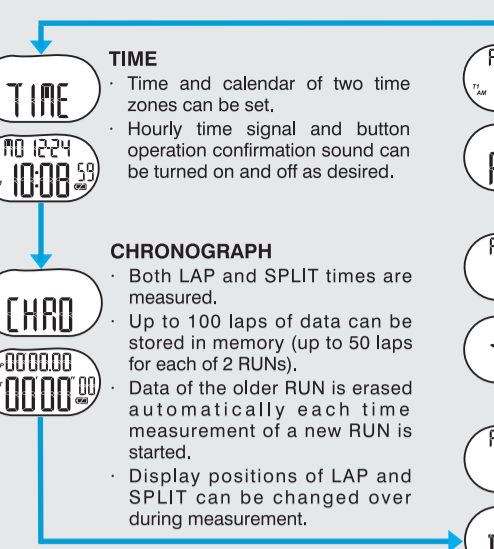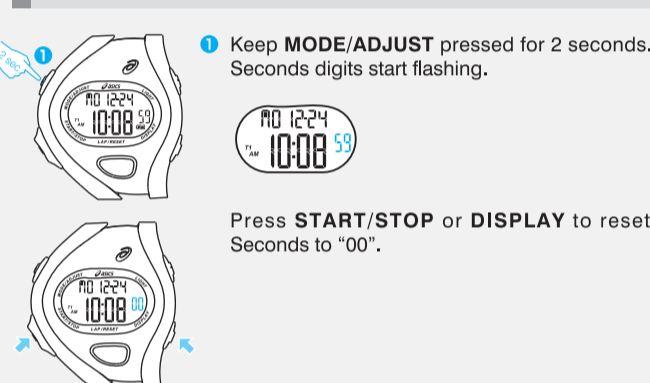  


CHRONOGRAPH

 
Changeover of Displays

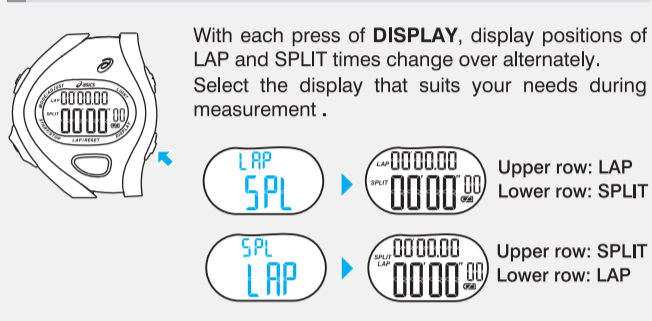

 Start, Stop and Reset of Measurement/Storage of Measured Data

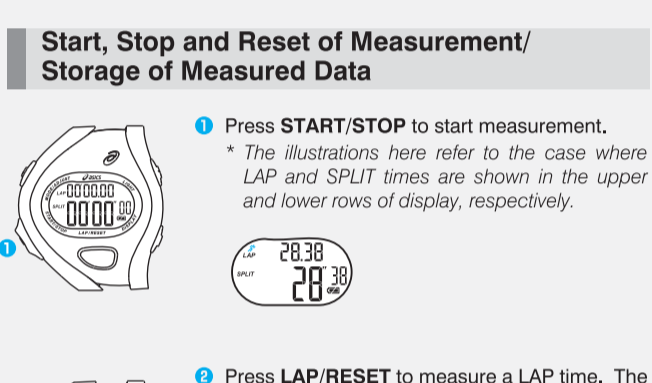


BACKLIGHT

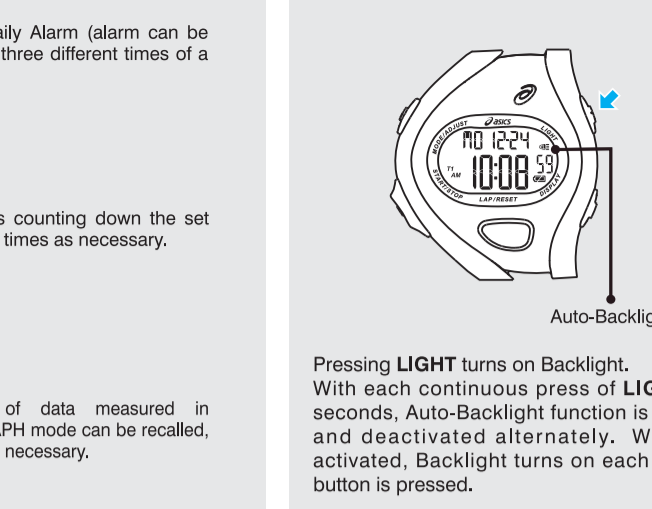


DATA

 How to Recall Data

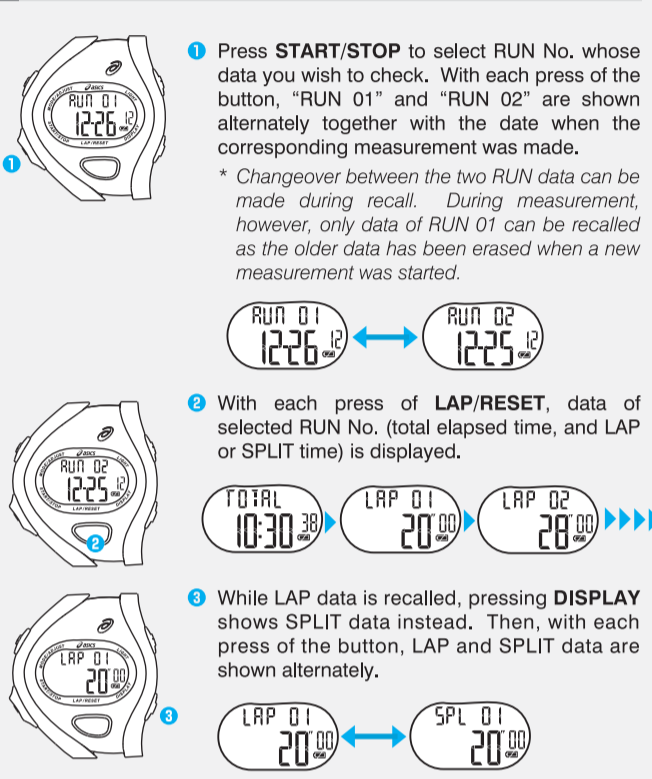


TIMER

 
Timer Setting

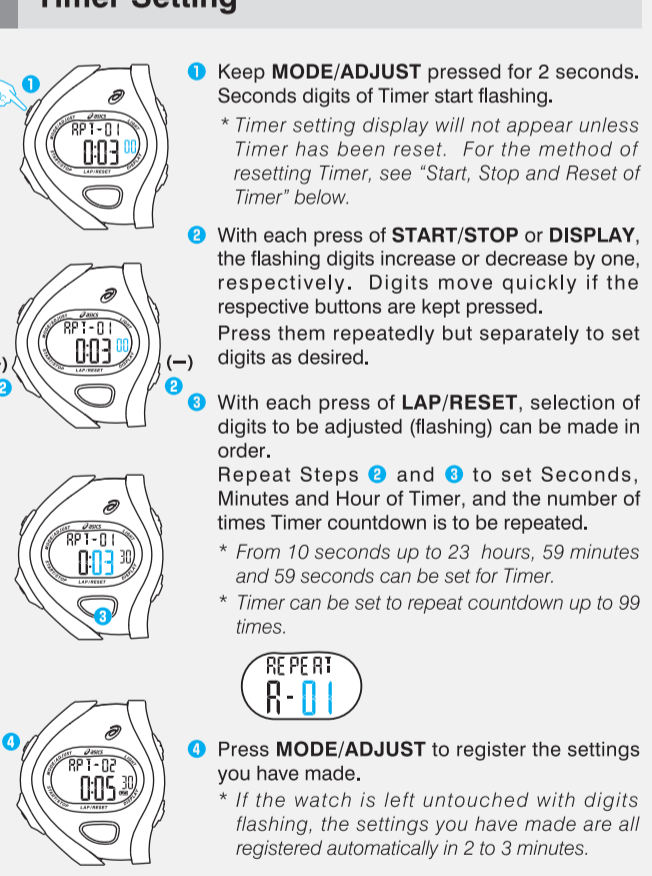


Start, Stop and Reset of Timer

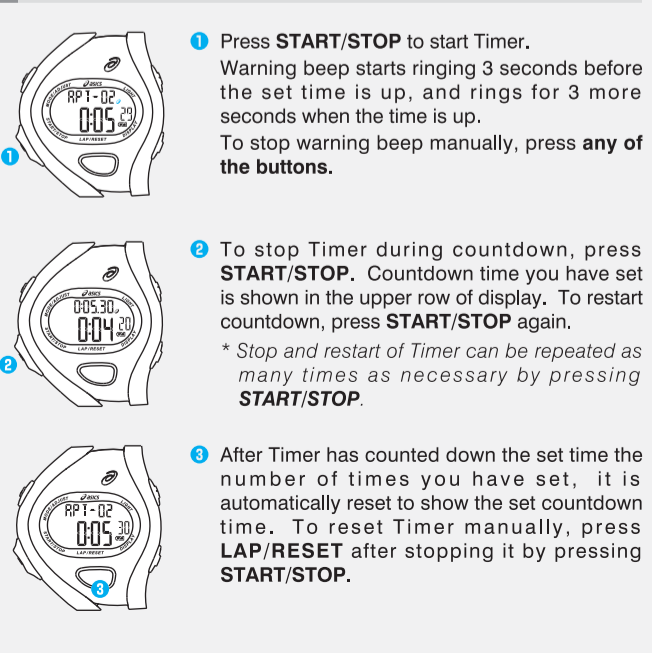 

MARK DESCRIPTIONS

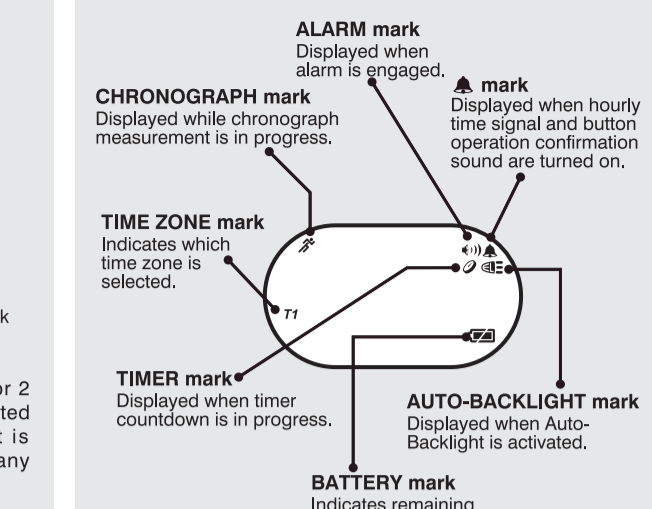 


Update and Deletion of Data

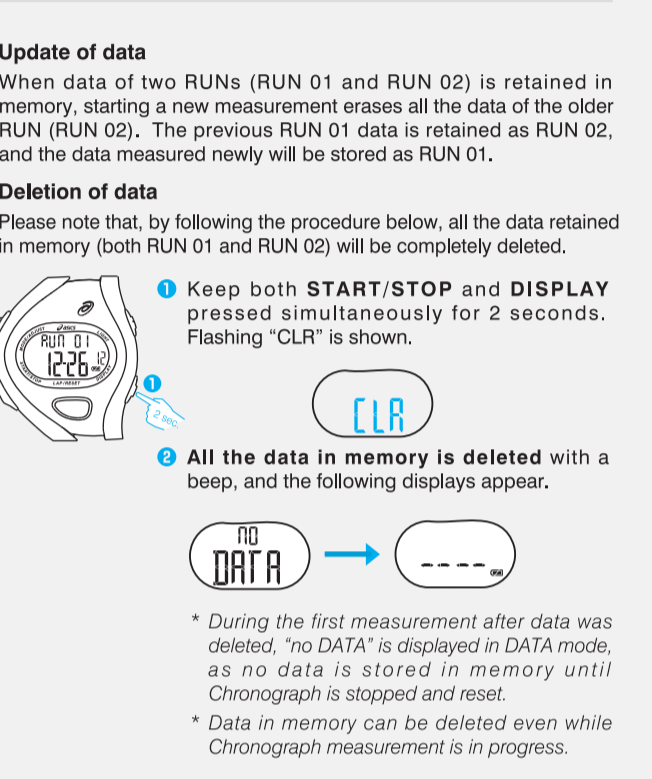 

ALARM

 Alarm Setting

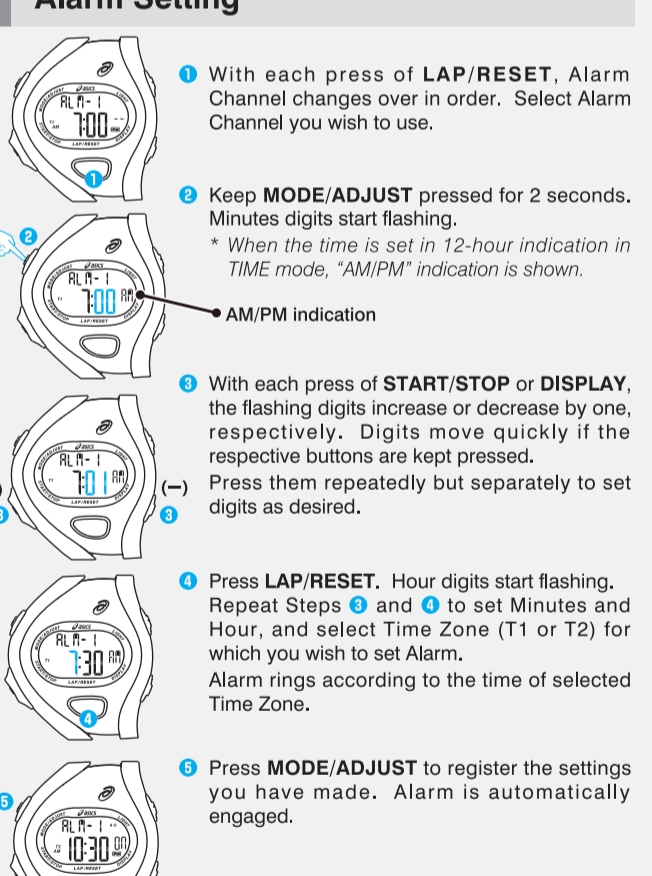

Engagement/Disengagement of Alarm

